
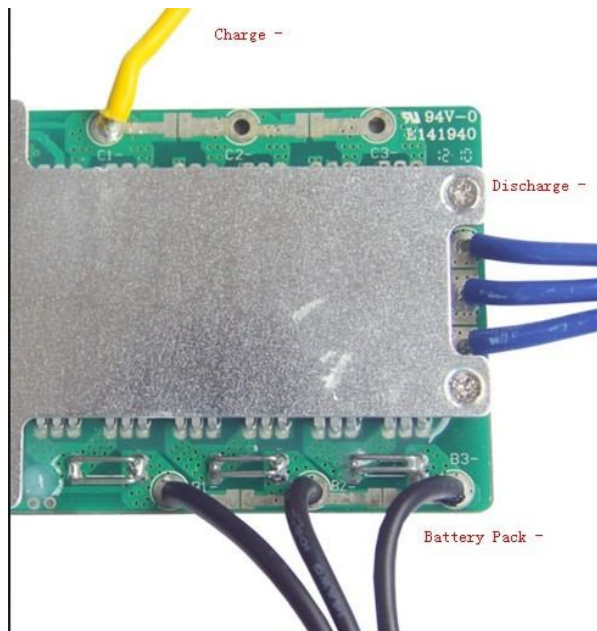


# WIRING DIAGRAM

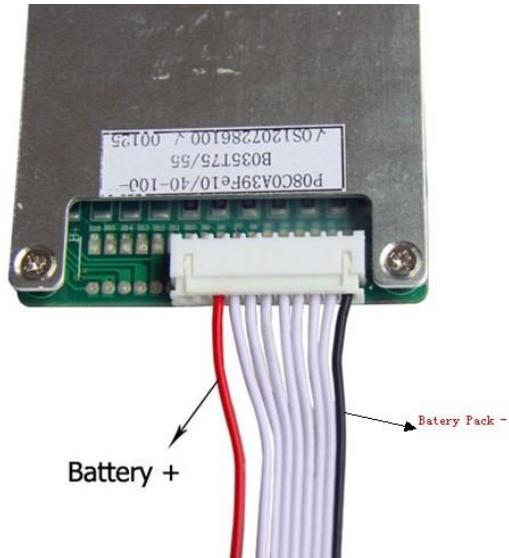

1. Connect the Balancing Wires: Please connect the black balancing wires from the battery's general negative end, one by one, negative-positive-negative... to the end, the red balancing wire to the general positive end .
2. You also have to connect the other wires B- P- C- (shows on the second picture)

**B- = Battery pack -    P--= Discharge -    C- = Charge -**

**Battery pack-** (3-in-1 black wires): you need to connect the black wires from the "B-" on the BMS to the battery's general negative end.

**Discharge-**( 3-in-1blue wires ) :You need to connect another red wire yourself to the battery's general positive end, the 2 blue wires and the red wire will be one pair of discharge wires, which should be connected to your controller.

**Charge-** (1 yellow wire): You need to connect another red wire yourself to the battery's general positive end,, the yellow wire and the red wire will be one pair of charge wires, which should be connected to your charger.